

**OY AUTROL AB**

Sateenkaari 1, P.O. Box 32

FIN-02101 ESPOO

Puh. (09) 439 1120

Fax (09) 455 3169

www.autrol.fi

Tel. Int. +358 9 439 1120

Fax Int. +358 9 455 3169

e-mail autrol@autrol.fi

**Aluekonttorit/District offices**

Kytöläntie 22

FIN-41310 LEPPÄVESI

Puh. (014) 632 174

Fax (014) 632 146

Viialantie 9 A

FIN-33710 TAMPERE

Puh. (03) 363 2920

Fax (03) 363 4940

nro: 95.6550

Page 1/8

# AU110

## Programmable 2-wire transmitter

for connection to resistance thermometers and thermocouples

for installation in: terminal head Form B to DIN 43 729

for mounting on: rail

### Brief description

The 2-wire transmitter uses resistance thermometers or thermocouples to acquire the temperature. With resistance thermometers, the probe can be connected in 2-/3- or 4-wire circuit. The versions 956555/... and 956556/... are intended for installation inside the hazardous area.

Probe type, connection circuit and range can be configured using the setup program. The 4 – 20 mA output signal (or reversed 20 – 4 mA) is available in linearized form (linear with temperature).


The instrument is designed for industrial application and conforms to the corresponding European Standards, to ensure electromagnetic compatibility (EMC).

The versions 956555/... and 956556/... conform to the Directives of EN 50 014, and to EN 50 020 "Electrical apparatus for use in hazardous areas" according to the Certificate of Conformity.


The transmitters AU110H and AU110HK-x (Types 956551/..., 956553/... and 956556/...) can also be programmed using a HART® communicator or a HART® modem in conjunction with a PC setup program.

### System diagrams


#### Connection example (Types 956550/... to 956553/...) with power supply unit

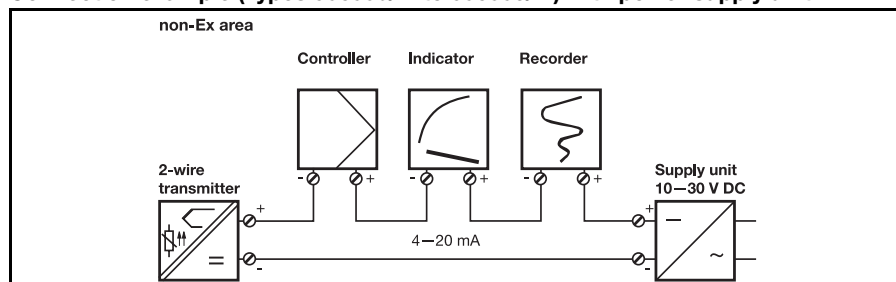

#### Connection example (Types 956555/... and 956556/...) for Ex application with Ex supply isolator

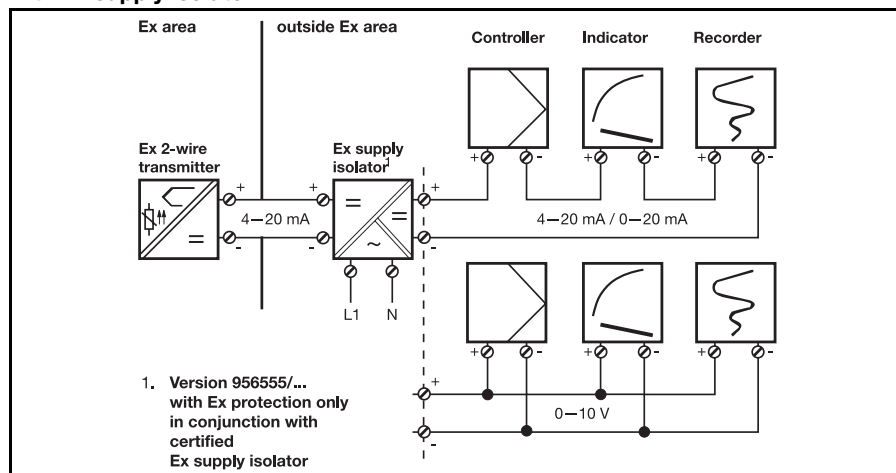

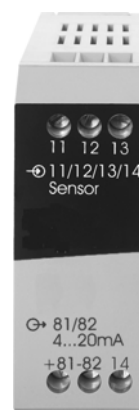

Type 956550/..., Type 956551/... (HART®)  
Type 956555/... (Ex), Type 956556/... (HART® / Ex)



Type 956552/..., Type 956553/... (HART®)

### Features

- Types 956551/..., 956553/... and 956556/... with HART® interface
- Type 956555/... Ex version   $\text{CE}_{\text{cond}} \text{Ex} \text{II 1 G EEx ia IIC T6/T5/T4}$
- Type 956556/... with HART® interface and as Ex version   $\text{CE}_{\text{cond}} \text{Ex} \text{II 1 G EEx ia IIC T6/T5/T4}$   
 $\text{II 2 G EEx ia IIC T6/T5/T4}$
- Types 956552/... and 956553/... in rail-mounting housing
- input and output electrically isolated
- freely configurable ranges
- customized linearization for resistance thermometer and thermocouple
- configuration via Windows setup program

## Technical data

### Input for thermocouple

Designation	Range limits	Range	Accuracy <sup>1</sup>
Fe-Con L DIN 43 710	-200 to +900°C	-200 to +900°C	typ. 0.5°C
Fe-Con J EN 60 584	-210 to +1200°C	-150 to +1200°C	typ. 0.5°C
Cu-Con U DIN 43 710	-200 to +600°C	-200 to +600°C	typ. 0.5°C
Cu-Con T EN 60 584	-270 to +400°C	-200 to +400°C	typ. 0.5°C
NiCr-Ni K EN 60 584	-270 to +1372°C	-140 to +1372°C	typ. 0.5°C
NiCr-Con E EN 60 584	-270 to +1000°C	-150 to +1000°C	typ. 0.5°C
NiCrSi-NiSi N EN 60 584	-270 to +1300°C	-100 to +1300°C	typ. 1°C
Pt10Rh-Pt S EN 60 584	-50 to +1768°C	20 to 1768°C	typ. 2°C
Pt13Rh-Pt R EN 60 584	-50 to +1768°C	50 to 1768°C	typ. 2°C
Pt30Rh-Pt6Rh B EN 60 584	0 to 1820°C	400 to 1820°C	typ. 2°C
MoRe5-MoRe41 <sup>2</sup>	0 to 2000°C	500 to 2000°C	typ. 2°C
W3Re-W25Re D	0 to 2495°C	500 to 2495°C	typ. 1°C
W5Re-W26Re C	0 to 2320°C	500 to 2320°C	typ. 1°C
Shortest span	Type L, J, U, T, K, E, N: 50°C Type S, R, B: 500°C Type MoRe5-MoRe41, D, C: 500°C		
Cold junction	Pt100 internal or external cold junction (adjustable from 0 to 80°C)		
Cold junction accuracy	± 1°C		
Sampling rate	> 1 measurement per second		
Sensor current	350nA		
Input filter	1st order digital filter; filter constant adjustable: - on Types 956550/..., 956552/... and 956555/... within the range 0 – 125sec - on Types 956551/..., 956553/... and 956556/... within the range 0 – 100sec		
Features	also programmable in °F; freely programmable range limits; input isolated from output		

<sup>1</sup> The accuracy refers to the maximum range span.

<sup>2</sup> Not available on Types 956551/..., 956553/... and 956556/...

### Input for resistance thermometer

Designation	Range limits	Range	Accuracy <sup>1</sup>
Pt 100 EN 60 751	-200 to +850°C	-100 to +200°C -200 to +850°C	±0.2°C ±0.4°C
Pt 100 JIS	-200 to +649°C	-100 to +200°C -200 to +649°C	±0.2°C ±0.4°C
Pt 500 DIN	-200 to +250°C	-100 to +200°C -200 to +250°C	±0.2°C ±0.4°C
Pt 1000 DIN	-200 to +250°C	-100 to +200°C -200 to +250°C	±0.2°C ±0.4°C
Ni 100	-60 to +250°C	-60 to +250°C	±0.2°C
Ni 500	-60 to +150°C	-60 to +150°C	±0.2°C
Ni 1000	-60 to +150°C	-60 to +150°C	±0.2°C
Connection circuit	2-, 3- or 4-wire circuit		
Shortest span	10°C		
Sensor lead resistance - for 3-, 4-wire connection - for 2-wire connection	≤ 11Ω per conductor measuring resistance + ≤22Ω internal lead resistance		
Sensor current	< 0.6mA		
Sampling rate	> 1 measurement per second		
Input filter	1st order digital filter; filter constant adjustable: - on Types 956550/..., 956552/... and 956555/... within the range 0 – 125sec - on Types 956551/..., 956553/... and 956556/... within the range 0 – 100sec		
Features	also programmable in °F; freely programmable range limits; input isolated from output		

<sup>1</sup> The accuracy refers to the maximum range span.

**Measurement circuit monitoring**

Underrange	linear drop to 3.8mA (as per NAMUR recommendation 43)
Overrange	linear rise to 20.5mA (as per NAMUR recommendation 43)
Probe short circuit / probe and lead break	resistance thermometer: $\leq 3.5\text{mA}$ or $\geq 21.0\text{mA}$ (configurable) thermocouple: $\leq 3.5\text{mA}$ or $\geq 21.0\text{mA}$ (configurable) <sup>1</sup>
Current limiting on probe short circuit or probe break	$\leq 23\text{mA}$

<sup>1</sup> Probe short-circuit recognition is not possible for thermocouple

**Output**

	Types 956550/..., 956552/..., 956555/...	Types 956551/..., 956553/..., 956556/...
Output signal	proportional DC current 4 – 20mA, 20 – 4mA	
Electrical isolation	between input and output	between input and output
Test voltage	$U_{\text{peak}} = 3.75\text{kV}/50\text{Hz}$	$U = 2.0\text{kV}/50\text{Hz}$
Transfer characteristic	linear with temperature	
	customized linearization	
	reversion of output signal	
Burden (Rb)	$Rb = (Ub - 8V) / 0.022A$	$Rb = (Ub - 10V) / 0.022A$
Burden error	$\leq \pm 0.02\% / 100\Omega^1$	
Calibration conditions / accuracy	24V DC at approx. 22°C / $\leq \pm 0.05\%$ <sup>1</sup>	
1st order digital filter	0 – 125sec configurable	0 – 100sec configurable
Step response 0 – 100 %	< 2sec (with filter constant 0sec)	
Switch-on delay (correct measurement after connecting the supply voltage only after ...)	5sec	4sec

<sup>1</sup> All specified values refer to 20mA full scale

**Custom linearization<sup>1</sup>**

Number of calibration points	maximum: 40
Interpolation	linear

<sup>1</sup> On Types 956551/..., 956553/... and 956556/... through 4th order polynomial

**Supply**

Supply voltage (Ub) with reverse polarity protection	Type 956550/...: 8 – 35V DC Type 956552/...: 8 – 35V DC Type 956555/...: 8 – 30V DC	Type 956551/...: 10 – 35V DC Type 956553/...: 10 – 35V DC Type 956556/...: 10 – 30V DC
Supply voltage error	$\leq \pm 0.01\%$ per V deviation from 24V <sup>1</sup>	

<sup>1</sup> All specified values refer to 20mA full scale

**Environmental influences**

Operating temperature range	-40 to +85°C	
Storage temperature range	-40 to +100°C	
Temperature error	resistance thermometer: $\leq \pm 0.005\%$ per °C deviation from 22°C <sup>1</sup> thermocouple: $\leq \pm 0.005\%$ per °C deviation from 22°C <sup>1</sup> plus accuracy of cold junction	
Long-term stability	$\leq 0.1\text{°C}$ per year <sup>2</sup> or $\leq 0.05\%$ per year <sup>2,3</sup>	
Climatic conditions	rel. humidity $\leq 95\%$ , with condensation	
Vibration strength	according to GL characteristic 2	
EMC	EN 61 326 Class B to industrial requirements	
IP protection	Types 956550/... and 956555/...: IP54 Types 956550/... and 956555/...: IP00 Type 956552/...: IP20	Types 956551/... and 956556/...: IP66 Types 956551/... and 956556/...: IP00 Type 956553/...: IP20

<sup>1</sup> All specified values refer to 20mA full scale

<sup>2</sup> under calibration conditions

<sup>3</sup> % refer to the selected span. The larger value applies.

## Housing

	Types 956550/..., 956551/..., 956555/..., 956556/...	Types 956552/..., 956553/...
Material	polycarbonate (encapsulated)	polycarbonate
Screw terminal	≤ 1.75mm <sup>2</sup> ; max. tightening torque 0.6Nm	≤ 2.5mm <sup>2</sup> ; max. tightening torque 0.6Nm
Mounting	in terminal head Form B DIN 43 729; in surface-mounting case (on request); in switchgear cabinet (mounting bracket is required)	on DIN rail 35mm x 7.5mm (EN 50 022); on DIN rail 15mm (EN 50 045); on G rail (EN 50 035)
Operating position	unrestricted	
Weight	approx. 40g	approx. 90g



## Version 956555/... (Ex) - Extract from the EC Type-Examination Certificate ZELM 99 ATEX 0018X

Marking	CE <sub>0032</sub> Ex II 1 G EEx ia IIC T6/T5/T4
Temp. range in "II 2 G" and "II 3 G"	T6 = -40 to +55°C / T5 = -40 to +70°C / T4 = -40 to +85°C
Temp. range in "II 1 G"	T6 = -40 to +40°C / T5 = -40 to +50°C / T4 = -40 to +60°C
Supply circuit Max. values at the terminals 1(+) and 2(-)	U <sub>i</sub> = 30V DC I <sub>i</sub> = 100mA P <sub>i</sub> = 750mW
Internal inductance and capacitance	L <sub>i</sub> = negligible C <sub>i</sub> = negligible
Sensor circuit Max. values at the terminals 3, 4, 5 and 6	U <sub>o</sub> = 9.6V DC I <sub>o</sub> = 4.5mA P <sub>o</sub> = 11mW linear output characteristic
Max. permissible external inductance and capacitance EEx ia IIC EEx ia IIB	L <sub>o</sub> = 4.5mH / C <sub>o</sub> = 709nF L <sub>o</sub> = 8.5mH / C <sub>o</sub> = 1300nF



## Version 956556/... (Ex) - Extract from the EC Type-Examination Certificate PTB 01 ATEX 2124

Marking	CE <sub>0032</sub> Ex II 1 G EEx ia IIC T6/T5/T4 II 2 G EEx ia IIC T6/T5/T4
Temp. range in "II 2 G" and "II 3 G"	T6 = -40 to +55°C / T5 = -40 to +70°C / T4 = -40 to +85°C
Temp. range in "II 1 G"	T6 = -20 to +40°C / T5 = -20 to +50°C / T4 = -20 to +60°C
Supply circuit Max. value at the terminals 1(+) and 2(-)	U <sub>i</sub> = 30VDC I <sub>i</sub> = 100mA P <sub>i</sub> = 750mW
Internal inductance and capacitance	L <sub>i</sub> = negligible C <sub>i</sub> = negligible
Sensor circuit Max. values at the terminals 3, 4, 5 and 6	U <sub>o</sub> = 5V DC I <sub>o</sub> = 5.4mA P <sub>o</sub> = 6.6mW linear characteristic
Internal inductance and capacitance	L <sub>i</sub> = negligible C <sub>i</sub> = negligible
Connected circuit <b>without</b> lumped external inductance or capacitance	L <sub>o</sub> = 1000mH C <sub>o</sub> = 100μF
Connected circuit <b>with</b> lumped external inductance or capacitance	
EEx ia IIC EEx ia IIB, EEx ia IIA	L <sub>o</sub> = 100mH / C <sub>o</sub> = 2μF L <sub>o</sub> = 100mH / C <sub>o</sub> = 9.9μF

### Connection diagram

	Connection for		Terminals	
		Supply voltage for Type 956550/... 8 – 35V DC  Supply voltage for Type 956551/... 10 – 35V DC  Supply voltage for Type 956555/... 8 – 30V DC (Ex) <sup>1</sup>  Supply voltage for Type 956556/... 10 – 30V DC (Ex) <sup>1</sup>  Current output 4 – 20mA	+1 $R_B = \frac{U_b - 8V}{22mA}$  -2 $R_B = \frac{U_b - 10V}{22mA}$  $R_B = \frac{U_b - 8V}{22mA}$  $R_B = \frac{U_b - 10V}{22mA}$  R <sub>B</sub> = burden resistance U <sub>b</sub> = supply voltage	
Ex version only in conjunction with certified Ex transmitter supply unit				
	Analog inputs			
	Thermocouple	+4 -6		
	Resistance thermometer in 2-wire circuit	3 6	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor	
	Resistance thermometer in 3-wire circuit	3 5 6	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor	
	Resistance thermometer in 4-wire circuit	3 4 5 6	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor	
Ex version: please note connection data of the Ex input circuit!				


<sup>1</sup> On Types 956555/... and 956556/... only up to 30V. The connection must only be made to an intrinsically safe circuit.

	Connection for		Terminals	
		Supply voltage for Type 956552/... 8 – 35V DC  Supply voltage for Type 956553/... 10 – 35V DC  Current output 4 – 20mA	+81 $R_B = \frac{U_b - 8V}{22mA}$  -82 $R_B = \frac{U_b - 10V}{22mA}$  R <sub>B</sub> = burden resistance U <sub>b</sub> = supply voltage	
	Analog inputs			
	Thermocouple (special feature: see order details)	+11 -12		
	Resistance thermometer in 2-wire circuit	11 13	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor	
	Resistance thermometer in 3-wire circuit	11 12 13	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor	
Resistance thermometer in 4-wire circuit	11 12 13 14	R <sub>L</sub> ≤ 11Ω R <sub>L</sub> = lead resistance per conductor		

## Setup program

The setup program is available for configuring the transmitter from a PC. With Types 956550/..., 956552/... and 956555/..., the connection is via the PC interface with TTL/RS232 converter and adapter and the setup interface of the transmitter, in the case of Types 956551/..., 956553/... and 956556/..., via a HART® modem. The connection for the setup circuit must only be used outside the hazardous area. It is not permissible to configure the transmitter inside the Ex area.

The protective cover must be closed after programming (Types 956550/... and 956555/...).

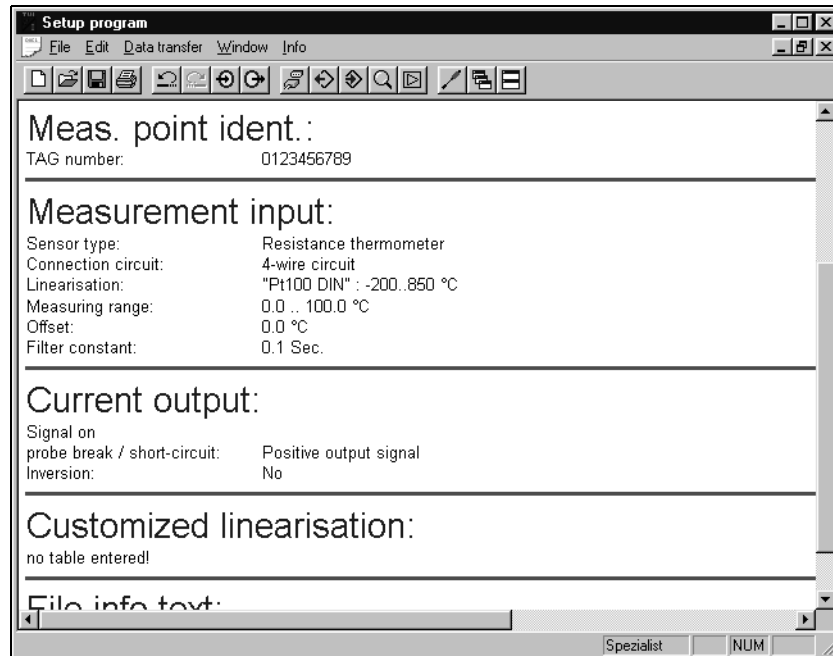

### Configurable parameters

TAG number (10 characters) on Types 956551/..., 956553/... and 956556/..., 8 characters only, but with additional 16-character description	Sensor type
Connection circuit (2-/3-/4-wire)	External and internal cold junction
Customized linearization	Range limits
Output signal rising/falling (reversion)	Digital filter
Response to probe break/short circuit	Recalibration/fine calibration (not on Types 956551/..., 956553/... and 956556/...)
Lead resistance with 2-wire circuit	

If no power supply (supply isolator) is available, the 2-wire transmitter Type 956550/..., 956552/... or 956555/... has to be configured using a 9V block battery as a power source.

### Fine calibration (not on Types 956551/..., 956553/... and 956556/...)


Fine calibration means correction of the output signal. The signal can be adjusted within  $\pm 5\%$  of the 20 mA full-scale value. Fine calibration is performed through the setup program. Values for 4 mA (zero), 20 mA (full scale) and offset can be calibrated separately, via the setup program.

### Hardware and software requirements

The following hardware and software requirements must be met when installing and operating the setup program:


IBM-PC or compatible PC from 486DX-2-100	16 MB main memory
15MB free space on hard disk	CD-ROM drive
1 free serial interface	Windows 95 or above, Windows NT.4.0 or Windows 2000

## Setup interface (Types 956550/... and 956555/...)

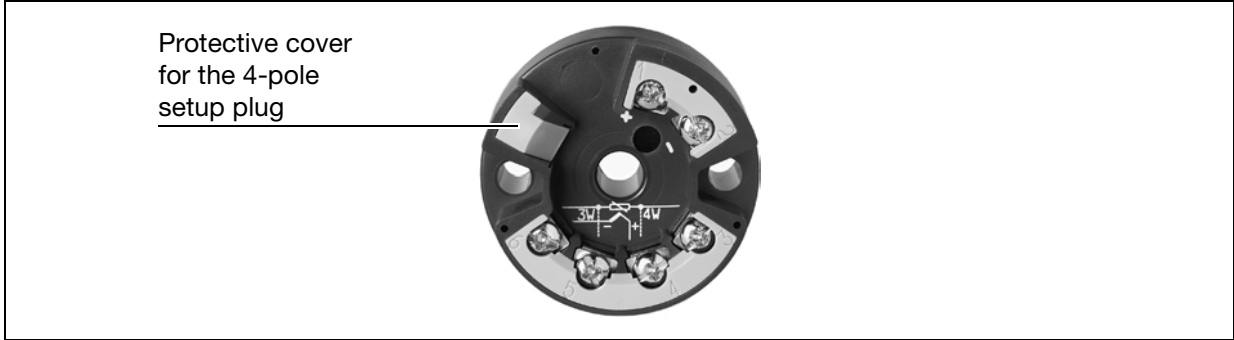


## HART<sup>®</sup> interface (Types 956551/... and 956553/...)

### Connection via HART<sup>®</sup> communicator and HART<sup>®</sup> modem

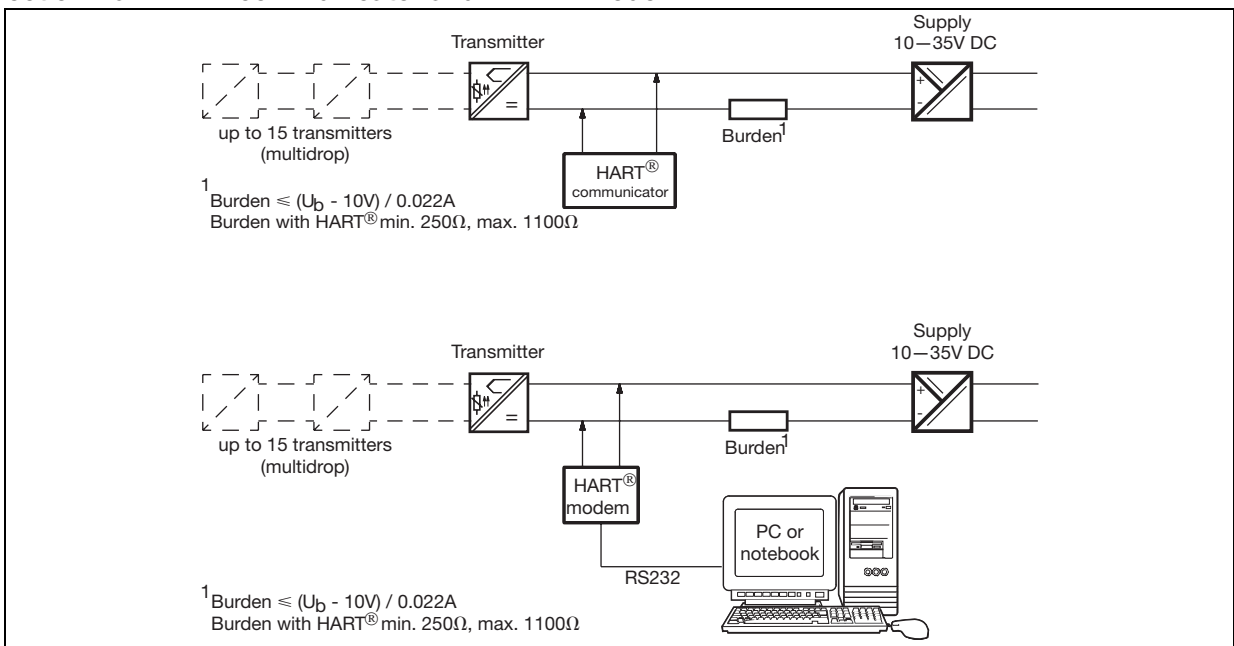



## HART<sup>®</sup> interface (Type 956556/...)
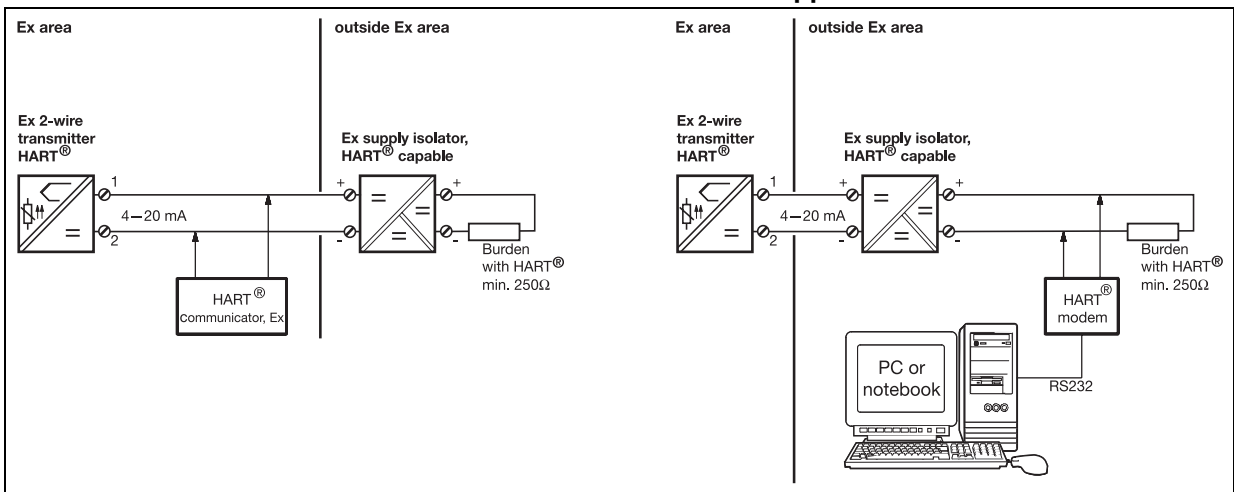
### Connection via HART<sup>®</sup> communicator and HART<sup>®</sup> modem for Ex application




## Order details: Programmable 2-wire transmitter AU110

### (1) Basic version

	956550	programmable 2-wire transmitter	
	956551	programmable 2-wire transmitter with HART® interface	
	956552	programmable 2-wire transmitter installed in rail-mounting housing <sup>1</sup>	
	956553	programmable 2-wire transmitter with HART® interface installed in rail-mounting housing <sup>1</sup>	
	956555	programmable 2-wire transmitter with Ex protection EEx ia IIC T6	
	956556	programmable 2-wire transmitter with HART® interface and Ex protection	
x	x	<b>(2) Input (programmable)</b>	
x	x	888 factory-set (Pt100 DIN 4w / 0 – 100°C)	
x	x	999 configuration to customer specification <sup>2</sup>	
x	x	<b>(3) Output (proportional DC current)</b>	
x	x	888 factory-set (4 – 20mA)	
x	x	999 configuration to customer specification (20 – 4mA)	
x	x	<b>(4) Probe break/ short circuit</b>	
x	x	888 factory-set (positive protection)	
x	x	999 configuration to customer specification (negative protection)	

Order code

Order example



<sup>1</sup> With thermocouple input, the sensor cannot be changed retrospectively, because of the internal compensating cable. With resistance thermometer input, all resistance thermometer types can be connected, but no thermocouples.

<sup>2</sup> Probe type and range have to be specified in plain text for configuration to customer specification.

## Standard accessories

- 1 Operating Instructions
- Fixing items: 2 screws, 2 compression springs (not for Types 956552/... and 956553/...)

## Accessories

- PC setup program, multilingual
- PC interface cable with TTL/RS232 converter and adapter (for Types 956550/..., 956552/... and 956555/...)
- HART® modem (for Types 956551/..., 956553/... and 956556/...), Sales No. 40/00345666
- HART® communicator (for Types 956551/..., 956553/... and 956556/...) Sales No. 40/00345668 (German) and 40/00384998 (English)
- Power supply units 1- and 4-way (nro. 95.6024)
- Isolating amplifier and supply isolator (nro. 95.6055)
- Ex transmitter supply unit (nro. 95.6056)
- Ex supply unit with isolating transformer, HART® capable for Type 956556/... (nro. 40.4757)
- Bracket for mounting on DIN rail, Sales No. 00352463